

Crane

INSTRUCTION MANUAL

Electric Convection Heater with Fan & Timer

**Item # EE-8068
Model # HMC-1500T-TIM**



**PLEASE READ AND SAVE THESE INSTRUCTIONS TO ENSURE THE
SAFE AND EFFECTIVE USE OF THIS APPLIANCE.**



TABLE OF CONTENTS

Table of Contents	P.1
Important Safety Instructions	P.2-3
General Safety Rules	P.4
List of Main Parts, Technical Specifications, Contents of Packaging	P.5
Assembly, Operation	P.6
Setting Timer, Safety Features,	P.7
Maintenance, Storing, Service Center	P.8
Warranty Information	P.9
Warranty Card	P.10



IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical products, especially when children are present.


WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE OUTLET SLOT AND FULLY INSERT.

READ AND SAVE ALL INSTRUCTIONS.

- This product is intended for indoor, non-commercial, household use for temporarily heating residential rooms. Do not use the product for any other purpose.
- Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not in use.
- Keep the product out of the reach of children and pets. This product is not intended for use by children.
- Place the product on a flat, steady, stable, heat-resistant surface.
- This product has hot parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored, as there may be a risk of fire or explosion.
- Use the product in a well-ventilated area. This heater is hot when in use. To avoid burns, do not let bare skin touch a hot surface. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 feet (0.9 meters) from all sides of the heater.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
- Do not insert or allow foreign objects to enter any opening on the heater as this may cause an electric shock, fire, or product damage.
- Do not use this product to dry or heat clothing, shoes, pipes, or any other item.
- This heater is not intended for use in damp/wet locations.
- Never locate heater where it may fall into a bathtub or other water container.
- Do not move the product when it is heated. Allow the product to thoroughly cool before handling it.
- Plug the product into a standard 120V AC electrical outlet.
- Do not allow the Power Cord to hang (e.g., over the edge of a table or counter) or place/run the Power Cord under rugs, carpeting, or in high-traffic areas where it may be tripped over or pulled.
- To disconnect the product, turn the controls to the off position, then remove the plug from the electrical outlet. Never pull on the Power Cord when disconnecting from power outlet.
- Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
- Do not plug or unplug the product from the electrical outlet with wet hands.
- Keep the Power Cord and product away from heated surfaces.

SAVE ALL INSTRUCTIONS!

- Do not operate any heater with a damaged cord or plug, after the heater malfunctions, or has been dropped or damaged in any manner. Return the product to a service facility for examination, electrical or mechanical adjustment, or repair.
-  To prevent a possible fire, do not block heat in any manner. In order to avoid overheating, **do not** cover the heater. **Never** cover the top or bottom heat vents.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE ALL INSTRUCTIONS!

GENERAL SAFETY RULES



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

READ AND SAVE ALL INSTRUCTIONS!

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
- The cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your unit may not operate properly. The unit should be operated on a separate electrical circuit from other operating appliances.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



SAFETY WARNING

Although the appliance is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the appliance near a heat source.
2. Never leave the appliance unattended while connected to the electrical outlet.
3. To avoid any accidental burns, never place hand on top vent or side when the appliance is in operation.
4. Use the appliance on a stable surface away from water.
5. Do not unplug from the socket by pulling on the supply cord.
6. The appliance must be unplugged:
 - A. Before any cleaning
 - B. After use
 - C. If it appears to be faulty


THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE ALL INSTRUCTIONS!

LIST OF MAIN PARTS

Parts Description:

1. Convection Heater Body
2. Timer
3. Rocker Switches (750W, 750W, Fan 13W)
4. Thermostat
5. Feet
6. Indicator Light
7. Power Cord

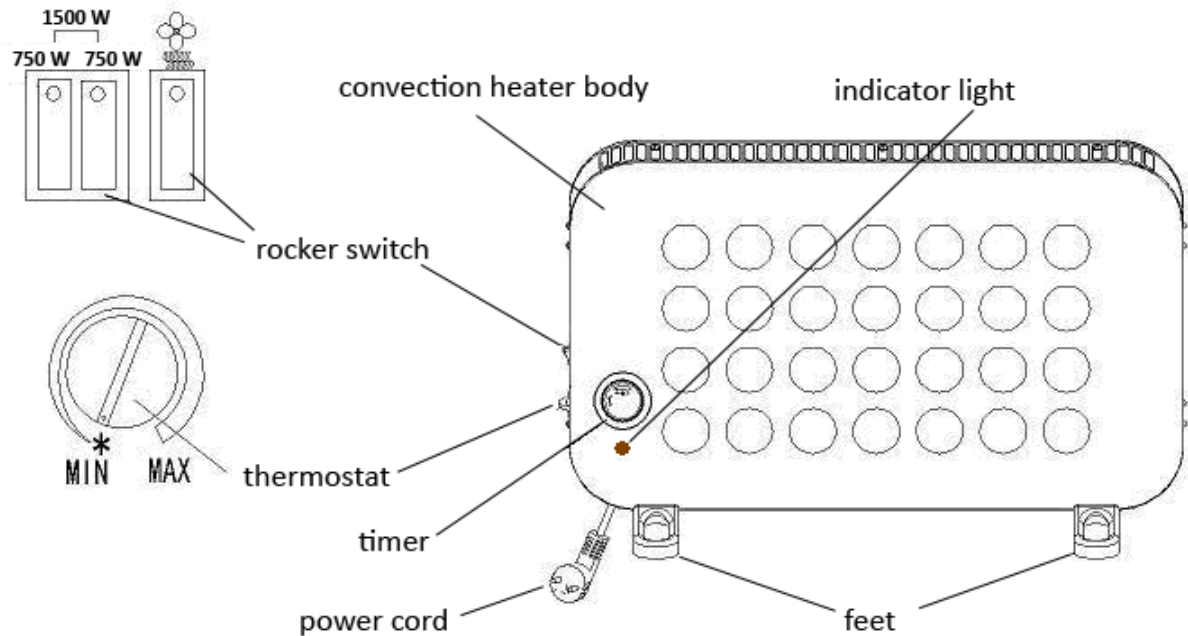

TECHNICAL SPECIFICATIONS:

Model Number	HMC-1500T-TIM
Maximum Power	1500 W
Heating Power Setting	750 W + 750 W
Turbo Power	13 W
Voltage	120 VAC / 60Hz

CONTENTS OF PACKAGING


1. Convection Heater
2. 2 x feet
3. 8 x tapping screws
4. Instruction Manual

If any of the above items are missing, please contact our service department at 1-888-599-0992 (Business hours Mon-Fri 9:00am - 4:00pm CT, <http://www.crane-usa.com>) for replacement.

ASSEMBLY

CAUTION: Risk of Fire – Do Not Operate Without Legs Attached to Heater!

1. Before using the heater, attach the feet (included separately) to the unit.
2. Attach to the base of the heater using the 4 tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater.

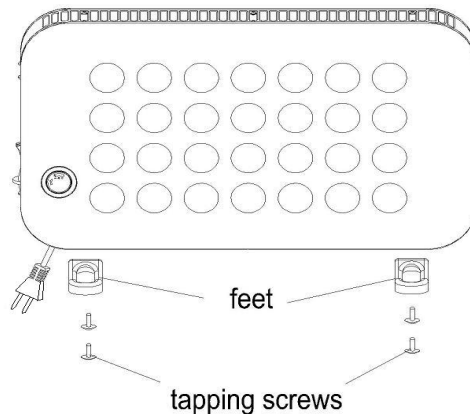



OPERATION

1. It is normal for the heater to emit some odor when it is turned on for the first time or after having not been used for a long period of time. This will disappear when the heater has been on a short while.
2. Choose a suitable location for the heater, taking into account the previously stated safety instructions.
3. Insert the plug of the heater into a suitable outlet.
4. Turn the thermostat knob fully in a clockwise direction to the maximum setting.
5. Turn on the heating elements by means of the rocker switches (750W, 750W) on the side of the heater. When the heating elements are on, the switches will illuminate. The heat output for each switch is 750W. For a maximum heat output of 1500W, both switches should be on.
6. When the desired room temperature has been reached, the lights on the rocker switches will turn off. The heater will keep the air temperature in the room at the set temperature by switching on and off automatically.
7. When set at minimum (fully counter-clockwise) position (depending on the size of the room) the heater will maintain the temperature above freezing.
8. You may turn on the fan to accelerate the heat convection for quick room warming.

SETTING THE TIMER

1. To use the heater in timed mode, it must be permanently connected to the power supply. If the power is disconnected, the clock will stop.
2. To operate the heater in timed mode, the red switch **within** the dial should be in the center position (HEAT + TIMER). If it is in the left position (HEAT ON), the heater will be permanently ON. If it is in the right position (HEAT OFF), the heater will be completely OFF.
3. The numbers around the timer dial show the time in 12-hour AM/PM sets. White numbering goes from 1:00 AM - 12:00 PM, red numbering goes from 1:00 PM - 12:00 AM. The timer is controlled by the red/white plastic segments. One single segment represents 15 minutes. Push the segment(s) away from the center of the dial for the heater to turn ON for that time period. Push the segments toward the center dial for the heater to turn OFF for that time period.
4. Rotate the dial clockwise until the arrowhead (to the left of the red switch on the dial) points to the current time.

FOR EXAMPLE: To set the timer to turn on at 1:00pm and turn off at 3:00pm, set the red switch to the center position (HEAT + TIMER). Push the red segments away between 1:00 PM and 3:00 PM on the dial. Make sure the arrowhead is pointing toward the current time. The heater will automatically turn on at 1:00 PM and turn off at 3:00 PM.

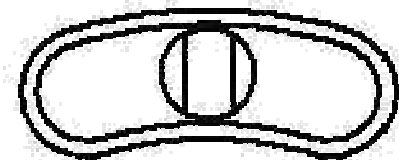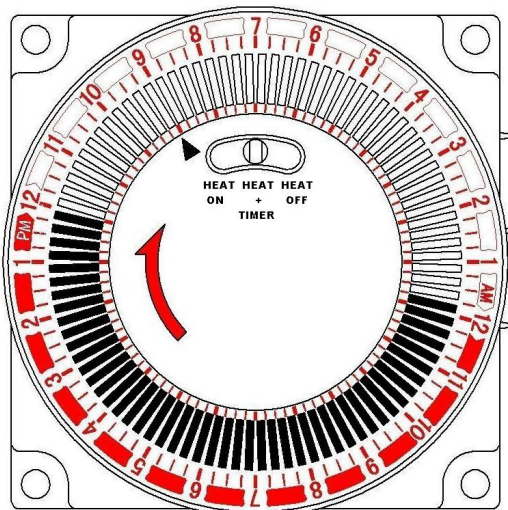

**HEAT HEAT HEAT
ON + OFF
TIMER**

SAFETY FEATURE

Indicator Light

This heater has a indicator light below the thermostat (see parts page) which turns on to indicate when the heater is switched on and plugged into a power outlet. When the heater is unplugged from the power source the indicator lamp will turn off.

Overheating Protection

The heater has an internal, over-heating safety device which automatically switches the heater off if an over-heat situation is detected. If this should occur, unplug the appliance and wait until the unit cools off. Once the unit has fully cooled, you can switch it on again.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



MAINTENANCE

CAUTION:

Always be sure that the heater is switched OFF, unplugged and completely cooled before cleaning or attempting to store the item. Do not immerse heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.

CARE AND CLEANING

1. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.
2. DO NOT use any detergents or abrasives and do not allow any water to enter the heater.

Please Note: Regardless of the type of heating system setup, always install and maintain at least one smoke detector in good working condition on each floor of your home. Periodically check and/or replace the battery in your smoke detector with a fresh battery.

STORING

Allow the appliance to cool completely before storing. Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance. Store the cord in a clean, dry location away from metal objects. Always check the plug before use to assure metal items have not become attached.

SERVICE CENTER

If you have any questions in regards to the operation of this appliance or are in need of spare parts, please contact our Customer Service Center:

Crane USA Inc.

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00pm CT)

Website: <http://www.crane-usa.com>

621 IL Route 83, Ste 202

Bensenville, Illinois 60106

ENVIRONMENTAL PROTECTION



If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way, by turning it into a public collection point. Please do not put it with your household waste.

LIMITED WARRANTY

Thank you for purchasing a top quality **Crane** product. This Electric Convection Heater was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects under normal use and conditions for 1 year.

NEED HELP?

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE. CALL US FOR PROBLEMS AND QUESTIONS. WE CAN HELP.

If you experience unsatisfactory operation, first refer to the manual to ensure that you are operating this item correctly. Follow Care and Cleaning Instructions. You can also visit www.crane-usa.com and click on the customer service tab.

If you have any questions or comments please call our Crane Customer Service Center at 1-888-599-0992 or e-mail customer-service@crane-usa.com. Please have specific style and model number of your item ready. Our Customer Service Representative will advise you how to correct the problem yourself, or will ask you to return the product for repair or replacement.

WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE.

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to normal wear and tear, as well as commercial use.

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair or replacement. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of / in connection with use of this product.

This warranty is only valid in the 48 contiguous states plus the District of Columbia, excluding Alaska, Hawaii, Puerto Rico, and the Virgin Islands. This warranty is effective only if the product is purchased and operated in the United States of America.

This Warranty gives you specific legal rights. However you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages, therefore, these restrictions may not apply to you.

Any instruction or warranty included in this manual may be subject to change without notice. For the most up-to-date set of instructions and warranty policy, please contact us or visit our website.

Crane USA Inc.

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00 pm CT)

Website: <http://www.crane-usa.com>

621 IL Route 83, Ste. 202, Bensenville, Illinois 60106

WARRANTY INFORMATION

WARRANTY CARD



Electric Convection Heater, Item #EE-8068, Model #HMC-1500T-TIM

This Crane Electric Convection Heater was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 1 year with proof of purchase.

In case you find this product to be defective within the warranty period send the product and all of its accessories to our service center. The consumer will be responsible for all shipping costs to the Crane Service Center. Crane will not assume responsibility for loss or damages to the product being returned to us. To avoid transport damages carefully package the product and insure it with the carrier. Be sure to fill out the warranty card and include it with a copy of the dated sales receipt. In return you will receive your repaired item, or a new product at the service center's discretion.

Please print clearly and fill in your information below. Send it together with the product and purchase receipt. Please read the Limited Warranty conditions mentioned in this instruction manual.

Customer Name	
Street	
City	
State	
ZIP Code	
Phone #	
Model #/Style	
Purchase Date	
Description of Defect :	
RA#	

Service Center Address:

Crane USA Inc.

621 IL Route 83, Ste 202, Bensenville, Illinois 60106

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00pm CT)

Website: <http://www.crane-usa.com>

PLEASE DETACH THIS SECTION AND RETURN IT WITH YOUR PRODUCT

WARRANTY CARD

