

Crane

9.5" OSCILLATING AIR CIRCULATOR FAN

Instruction Manual

FOR MODEL:
EE-5617



**If you have any questions about the operation of your fan,
please contact Crane Customer Care.**

Toll Free: 888-599-0992

Email: customer-service@crane-usa.com



**PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE
THE SAFE AND EFFECTIVE USE OF THIS FAN.
SAVE YOUR DATED PROOF OF PURCHASE!**

[You will need this in case of warranty]


staple
tape
or paperclip
your
receipt
HERE

TABLE OF CONTENTS

Table of Contents & Sustainability	P. 1
Safety Instructions	P. 2-3
List of Main Parts	P. 4
Operation & Use	P. 5
Technical Specifications, Maintenance & Customer Care	P. 6
Warranty Information	P. 7

CRANE & SUSTAINABILITY

Crane USA is dedicated to your environment both inside and outside your home. We know if cleaned and maintained properly, our products last for years helping to reduce unnecessary use of resources and emissions making new products.

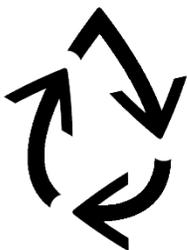

The Crane manual you are holding is from recycled materials with no added finishes or harmful dyes. If the fan should no longer operate, please be sure to dispose of the unit in an environmentally friendly way by taking it to a public collection point.

**PLEASE DO NOT PLACE BROKEN FAN WITH
YOUR REGULAR HOUSEHOLD WASTE.**

IMPORTANT SAFETY INSTRUCTIONS



WARNING! READ AND SAVE THESE INSTRUCTIONS. Failure to follow all of the instructions listed below may result in electric shock, fire and/or serious personal injury.

1. Always turn the fan off before removing the plug from the outlet. **NEVER PLUG IN OR UNPLUG WITH WET HANDS.**
2. Always turn the fan off and unplug it immediately after using and before cleaning.
3. To protect against electrical hazards, do not place the fan in water or other liquids. Do not allow the fan to become wet or damp.
4. Do not store the fan where it can fall into water or other liquids.
5. Do not store the fan unattended when it is plugged in. Turn the fan off when leaving it for an extended period of time.
6. Use the fan only for its intended use as described in these operating instructions.
7. Do not operate any appliance if its cord or plug is damaged, after the appliance has malfunctioned, or after it has been dropped or damaged in any way. Always follow the warranty instructions.
8. Place fan on a flat, level surface to avoid it overturning.
9. Avoid contact with moving parts.
10. Never drop or insert any object into any opening. Do not insert any objects into the area protected by guards.
11. Do not obstruct the airflow.
12. Do not operate the fan without the guard.
13. Close supervision is necessary when any appliance is operated near children. **DO NOT let your child play with this appliance.** Serious injury and electrocution may be possible. This appliance must be operated by an adult. Children should be supervised to ensure that they do not play with this tower fan.

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

SAVE THESE INSTRUCTIONS!

GENERAL SAFETY INSTRUCTIONS



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the user that common sense and caution are a factor which cannot be built into this product, but must be supplied by the user.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- Avoid the use of extension cords because the extension cord may overheat and cause a risk of fire.

SAVE ALL INSTRUCTIONS!

CAUTION: A short Power Supply Cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the extension cord must be (1) marked with an electrical rating of 125 V and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

ELECTRIC POWER

If the electric circuit is overloaded by other appliances, your fan and/or appliances may not operate properly. The fan should be operated on a separate electrical circuit from other operating appliances.

POLARIZED PLUG

This fan has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



SAFETY WARNING

Although your fan is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the fan near a heat source.
2. Never leave the fan unattended while connected to the electrical outlet.
3. To avoid any accidental burns, never place hands on vents or sides when the appliance is in operation.
4. Use the fan on a stable surface away from water.
5. Do not unplug from the socket by pulling on the power cord.
6. The fan must be unplugged:
 - A. Before any cleaning
 - B. After each use
 - C. If it appears to be faulty

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

LIST OF MAIN PARTS

FIGURE 1:

1. Fan Blades
2. Control Panel
3. Remote Control Storage




FIGURE 2:

4. Oscillation
5. Timer Setting (1-7hr)
6. Fan Speed
7. Power



OPERATION & USE

1. Place the fan in the desired location and plug the fan into a 120V AC outlet. **This fan has a polarized plug (one blade is wider than the other).**
2. Manual Adjustment (up and down for 0°/45°/90°)

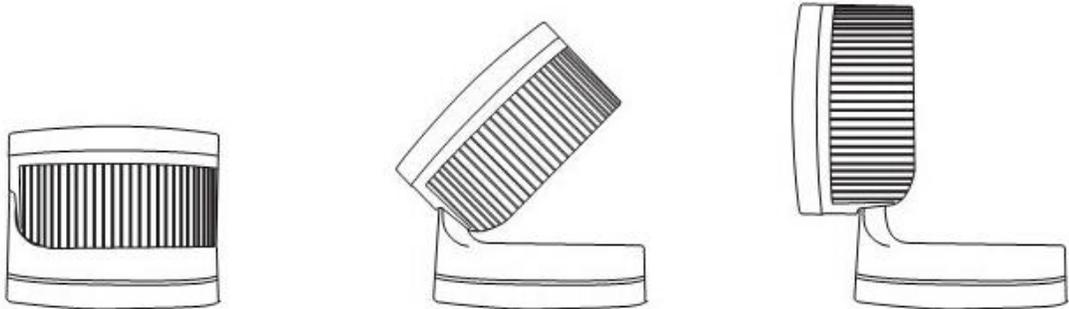

3. Choose your desired setting (below) and enjoy your new fan!

ON/OFF Button

To turn the unit power on, **touch the**  **key** to turn on the power. The unit starts operation at medium. Touching the key again will stop the unit.

Speed Button

While the unit is on, **touch the**  **key** and it will change the speed of the fan. This will cycle from low, medium and high.

Timer Button

When the unit is on, **touch the**  **key**. You can choose between 1 and 7 hours. Each touch of the key will increase the timer. The indicator light will illuminate to show the time of your setting. The unit will turn off automatically according to your set time.

Oscillation Button

While the unit is on, **touch the**  **key** and it will turn left or right automatically. Touching the key again will stop the oscillation.

Remote Control Operation

There are 4 buttons on the remote control. Their function is equivalent to the functions of the touch sensors on the control panel of the device. If you wish to use the remote control, point the remote control at approximately the level of the control panel with the display. The maximum signal range of the remote control is 6 meters. If you place the remote in such a way that the transmission of the signal is blocked by barrier, the signal may not be transmitted at all.

TECHNICAL SPECIFICATIONS

Rating Voltage	120 VAC / 60Hz
Wattage	35 W
Model Number	EE-5617

MAINTENANCE

CAUTION:


Always be sure that the fan is switched OFF and unplugged. Do not immerse fan in water or allow water to drip into the interior of the fan, as this could create an electric shock hazard.

CARE AND CLEANING

1. Always turn off the fan and disconnect the cord from the electrical outlet before cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner.
3. Clean the outside of the fan by wiping with a damp cloth and buff with a dry cloth. **DO NOT** use any detergents or abrasives and do not allow any water to enter the fan. **DO NOT** allow water to run into the interior of the fan as this could create a fire or electric shock hazard.
4. The fan motor is lubricated for life and will not require further lubrication.

Removing the Grill for Cleaning:

From the back, loosen the top left screw until you are able to rotate the grill to the open position and lift up.

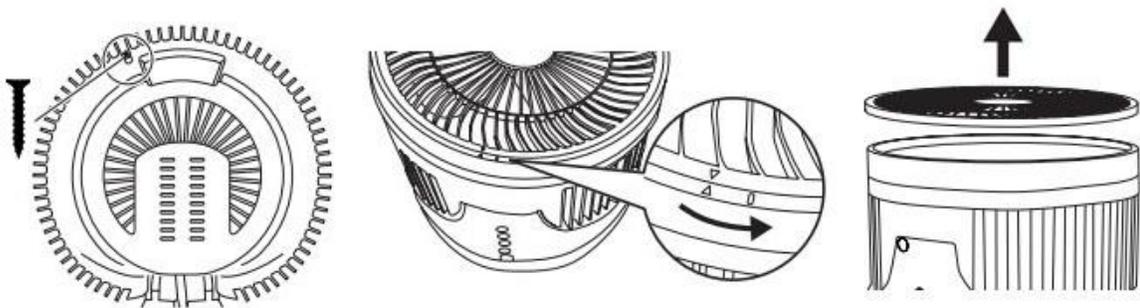

CRANE CUSTOMER CARE

CALL US: 888-599-0992 (Mon-Fri 9:00am – 4:00pm CST)
EMAIL US: customer-service@crane-usa.com
LIVE CHAT: available at www.crane-usa.com

CRANE WARRANTY

For more information regarding the warranty policy,
please visit our website: www.crane-usa.com/customer-service

LIMITED WARRANTY

Thank you for purchasing a Crane product which has been tested to meet our stringent quality standards. This product is warranted to be free from manufacturing defects under normal use and conditions for 1 year.

**PLEASE CONTACT US BEFORE RETURNING THIS PRODUCT TO THE STORE.
CALL CRANE CUSTOMER CARE FOR PROBLEMS AND QUESTIONS. WE CAN HELP.**

WARRANTY REQUIRES A DATED PROOF OF PURCHASE.

This warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons, or a failure to follow operating instructions provided with the product. This warranty does not apply to normal wear and tear or commercial use.

In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss – direct, indirect or incidental – or consequential damage arising out of, or in connection with the use of this product.

This warranty is valid only in the 48 contiguous states plus the District of Columbia and excludes Puerto Rico and the Virgin Islands. This warranty is effective only if the product is purchased and operated in the United States of America.

Any instructions or warranty included in this manual may be subject to change without notice. For the most up-to-date instructions and warranty information, please contact us or visit our website.

**TO RECEIVE WARRANTY INSTRUCTIONS AND RETURN AUTHORIZATION,
PLEASE CALL OR EMAIL CRANE CUSTOMER CARE.**

CRANE USA, INC.

1015 Hawthorn Dr., Itasca, IL 60143

Toll Free: 1-888-599-0992 (Monday - Friday 9:00am - 4:00pm CST)

Email: customer-service@crane-usa.com

Website: www.crane-usa.com

Crane

DESIGN FOR BETTER LIVING