



## **MINI CERAMIC TOWER HEATER**

### **Instruction Manual**

FOR MODELS:  
EE-7588BK, EE-7588R, EE-7588W, EE-7588GR



**If you have any questions about the operation of your heater, please contact Crane Customer Care.**

**Toll Free:** 888-599-0992

**Email:** [customer-service@crane-usa.com](mailto:customer-service@crane-usa.com)



**PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE  
THE SAFE AND EFFECTIVE USE OF THIS HEATER.**

# **SAVE YOUR DATED PROOF OF PURCHASE!**

[ You will need this in case of warranty ]

 


staple  
tape  
or paperclip  
your  
receipt  
HERE

# TABLE OF CONTENTS

|                                      |        |
|--------------------------------------|--------|
| Table of Contents & Sustainability   | P. 1   |
| Safety Instructions                  | P. 2-3 |
| List of Main Parts                   | P. 4   |
| Technical Specifications & Assembly  | P. 5   |
| Operation & Safety                   | P. 6   |
| Maintenance, Storage & Customer Care | P. 7   |
| Warranty Information                 | P. 8   |

## CRANE & SUSTAINABILITY

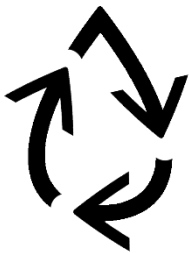

Crane USA is dedicated to your environment both inside and outside your home. We know if cleaned and maintained properly, our products last for years helping to reduce unnecessary use of resources and emissions making new products.

The Crane manual you are holding is from recycled materials with no added finishes or harmful dyes. If the heater should no longer operate, please be sure to dispose of the unit in an environmentally friendly way by taking it to a public collection point.

**PLEASE DO NOT PLACE BROKEN HEATERS WITH YOUR REGULAR HOUSEHOLD WASTE.**

# IMPORTANT SAFETY INSTRUCTIONS



**WARNING! READ AND SAVE THESE INSTRUCTIONS.** Failure to follow all of the instructions listed below may result in electric shock, fire and/or serious personal injury.

1. This product is intended for indoor, non-commercial, household use for temporarily heating residential rooms. Do not use the product for any other purpose.
2. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not in use.
3. Keep the product out of the reach of children and pets. This product is not intended for use by children.
4. Place the product on a flat, steady, stable, heat-resistant surface. Never place the device directly in front of or under a socket.
5. This product has hot parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored, as there may be a risk of fire or explosion.
6. Use the product in a well-ventilated area. This heater is hot when in use. To avoid burns, do not let bare skin touch a hot surface. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 feet (0.9 meters) from all sides of the heater.
7. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
8. Do not insert or allow foreign objects to enter any opening on the heater as this may cause an electric shock, fire, or product damage.
9. Do not use this product to dry or heat clothing, shoes, pipes, or any other item.
10. This heater is not intended for use in damp/wet locations.
11. Never locate heater where it may fall into a bathtub or other water container.
12. Do not move the product when it is heated. Allow the product to thoroughly cool before handling it.
13. Plug the product into a standard 120V AC electrical outlet.
14. Do not allow the Power Cord to hang (e.g., over the edge of a table or counter) or place/run the Power Cord under rugs, carpeting, or in high-traffic areas where it may be tripped over or pulled.
15. To disconnect the product, press the Power button on the display panel and then remove the plug from the electrical outlet. Never pull on the Power Cord when disconnecting from power outlet.
16. Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
17. Do not plug or unplug the product from the electrical outlet with wet hands.
18. Keep the Power Cord and product away from heated surfaces.
19. Do not operate any heater with a damaged cord or plug, after the heater malfunctions, or has been dropped or damaged in any manner. Return the product to a service facility for examination, electrical or mechanical adjustment, or repair.

**TO PREVENT A POSSIBLE FIRE, DO NOT BLOCK HEAT IN ANY MANNER. IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER. NEVER COVER THE TOP OR BOTTOM HEAT VENTS.**

**CAUTION:** Do not use this device with a programmer, timer switch or any other device which would switch the device on automatically; There is danger of a fire if the device is covered or incorrectly located.

## SAVE THESE INSTRUCTIONS!

# GENERAL SAFETY INSTRUCTIONS



**WARNING!** Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the user that common sense and caution are a factor which cannot be built into this product, but must be supplied by the user.

## SPECIAL INSTRUCTIONS

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- Avoid the use of extension cords because the extension cord may overheat and cause a risk of fire.

## SAVE ALL INSTRUCTIONS!

**CAUTION:** A short Power Supply Cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the extension cord must be (1) marked with an electrical rating of 125 V and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

## ELECTRIC POWER

If the electric circuit is overloaded by other appliances, your heater and/or appliances may not operate properly. The heater should be operated on a separate electrical circuit from other operating appliances.

## POLARIZED PLUG

This heater has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



## SAFETY WARNING

Although your heater is easy to operate, for your safety, the below warnings must be followed:


1. Do not place the heater near a heat source.
2. Never leave the heater unattended while connected to the electrical outlet.
3. To avoid any accidental burns, never place hands on vents or sides when the appliance is in operation.
4. Use the heater on a stable surface away from water.
5. Do not unplug from the socket by pulling on the power cord.
6. The heater must be unplugged:
  - A. Before any cleaning
  - B. After each use
  - C. If it appears to be faulty

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.**

# LIST OF MAIN PARTS

**Fig. 1 (Heater & Parts)**

1. Control Knob
2. Oscillating Switch
3. Power Indicator Light
4. Heat Grill
5. (4x) Base Screws
6. Front of Base
7. Back of Base

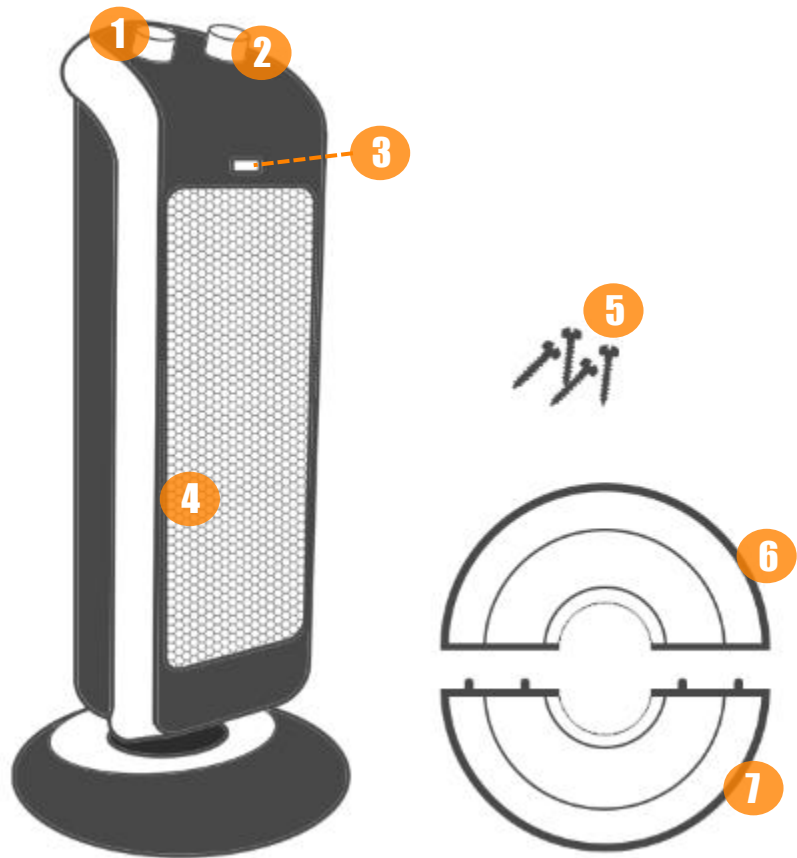 

**Fig. 2 (Control Knobs)**



# TECHNICAL SPECIFICATIONS

|                     |                |
|---------------------|----------------|
| Maximum Power       | 1500W          |
| Heat Power Settings | 750W + 750W    |
| Voltage             | 120 VAC / 60Hz |

 
## ASSEMBLY & USER INFORMATION:

### CAUTION:

Do not use this heater if it has not been fully assembled. Make sure the base screws holding the base & main unit together are securely tightened. Keep plastic wrapping away from children.

### ASSEMBLY:

1. Remove tie from power cord & unravel
2. Connect the front base to the back base by placing attached pegs into corresponding holes.
3. Slip the power cord through the assembled base from the top.
4. Position the connected base piece so the front base piece is facing the same direction as the front heat grill.
5. Adjust base so the screw holes align properly. Use the 4 base screws provided (taped to the tower heater) to secure the base to the main unit.
6. Once base is secured, unscrew on side of the cord holder (on the bottom of the base), place the power cord in the slot, then swing the cord holder back over the cord & replace the screw.
7. The power cord should now fit into the groove on the back of the base piece so the heater sits level on the floor.

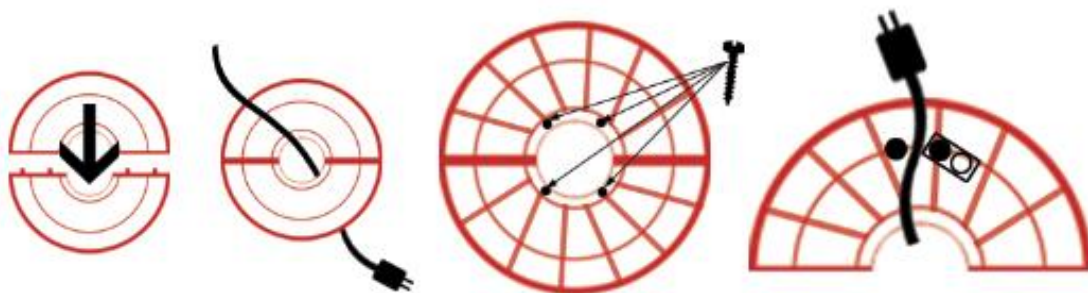

# OPERATION & SAFETY

## CAUTION:

**ALWAYS USE CAUTION WHEN HANDLING THE TOWER HEATER. DO NOT DROP HEATER OR COVER THE HEAT GRILL.**

## OPERATING INSTRUCTIONS

1. Place tower heater on a firm, level surface and plug the cord into an electrical outlet. Be sure it fits tightly in the outlet. A loose fit may cause overheating and damage to the plug.
2. While plugged in, the power indicator light will illuminate red. The indicator light will remain lit until the control knob is turned off and the cord is unplugged.  
**NOTE:** *During the first few minutes of initial use, you may notice a slight odor. This is normal and should quickly disappear.*
3. Rotate the control knob to the desired function (Fan, LO or HI).
4. Use the oscillation knob to allow the heater to oscillate from right to left while ON.
5. To turn off the heater, turn the control knob to OFF, then unplug the cord.

## SAFETY PROTECTION SYSTEMS

**This Tower Heater has protection safeguards that shut off the Tower Heater when/if the components become excessively hot.**

- If the tower heater becomes overheated, it will shut OFF automatically.
- Remove any nearby objects that may be causing overheat conditions. Keep at least three feet of space on all sides of the heater to allow adequate air circulation.
- Use the Tower Heater in a well-ventilated area.
- Place on a flat, smooth, stable surface.
- Unplug the Tower Heater from power outlet. Allow Tower Heater to completely cool, then plug back into the electrical outlet for use.

## TROUBLESHOOTING

**If your Tower Heater shuts off unexpectedly or fails to operate, the above mentioned safety features may have activated to prevent overheating.**

- Be sure the power supply cord is plugged into a working electrical outlet.
- The Tower Heater may be off due to overheating. Unplug the cord and allow it to cool 15-20 minutes before plugging it back in & turning it on.



## MAINTENANCE

**CAUTION:** Always be sure the heater is switched OFF, unplugged and completely cooled before cleaning or attempting to store the item. The Tower Heater takes approximately 15-20 minutes to cool completely. Do NOT immerse heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.

**PLEASE NOTE:** Regardless of the type of heating system setup, always install and maintain at least one smoke detector in good working condition on each floor of your home. Periodically check and/or replace the battery in your smoke detector with a fresh battery.

## CLEANING & STORAGE

- Use a soft damp cloth to clean the exterior enclosure.
- Never attempt to use gasoline, alcohol or chemical solvent to clean the Tower Heater
- Store the Tower Heater in a clean, dry place when not in use.



## CRANE CUSTOMER CARE

**CALL US:** 888-599-0992 (Mon-Fri 9:00am – 4:00pm CST)  
**EMAIL US:** [customer-service@crane-usa.com](mailto:customer-service@crane-usa.com)  
**LIVE CHAT:** available at [www.crane-usa.com](http://www.crane-usa.com)

# CRANE WARRANTY

For more information regarding the warranty policy,  
please visit our website: [www.crane-usa.com/customer-service](http://www.crane-usa.com/customer-service)

## LIMITED WARRANTY

Thank you for purchasing a Crane product which has been tested to meet our stringent quality standards. This product is warranted to be free from manufacturing defects under normal use and conditions for 1 year.

**PLEASE CONTACT US BEFORE RETURNING THIS PRODUCT TO THE STORE.  
CALL CRANE CUSTOMER CARE FOR PROBLEMS AND QUESTIONS. WE CAN HELP.**

### WARRANTY REQUIRES A DATED PROOF OF PURCHASE.

This warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons, or a failure to follow operating instructions provided with the product. This warranty does not apply to normal wear and tear or commercial use.

In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss – direct, indirect or incidental – or consequential damage arising out of, or in connection with the use of this product.

**This warranty is valid only in the 48 contiguous states plus the District of Columbia** and excludes Puerto Rico and the Virgin Islands. This warranty is effective only if the product is purchased and operated in the United States of America.

Any instructions or warranty included in this manual may be subject to change without notice. For the most up-to-date instructions and warranty information, please contact us or visit our website.

**TO RECEIVE WARRANTY INSTRUCTIONS AND RETURN AUTHORIZATION,  
PLEASE CALL OR EMAIL CRANE CUSTOMER CARE.**

**CRANE USA, INC.**  
1015 Hawthorn Dr., Itasca, IL 60143

Toll Free: 1-888-599-0992 (Monday - Friday 9:00am - 4:00pm CST)  
Email: [customer-service@crane-usa.com](mailto:customer-service@crane-usa.com)  
Website: [www.crane-usa.com](http://www.crane-usa.com)

*Crane*

DESIGN FOR BETTER LIVING